

La-Z-Boy Sofascreen User Manual



La-Z-boy

Version 0126




Warning

- Please take the time to read and understand this user manual carefully.
- Keep your user manual in a safe place for future reference.
- Do not operate the device if the power cord or plug is damaged.
- If any issues occur, please contact your retailer's customer service department immediately for repair. Do not disassemble or attempt to repair the device yourself.
- If your display screen is damaged or gets wet, safely disconnect the power and contact your retailer's customer service department.
- Do not insert or place anything into the exposed openings of this product.
- This product is for indoor use only. Avoid high temperatures and direct sunlight.
- Ensure all cables are connected before turning on the power.
- Turn off the power before cleaning and wipe with a microfiber cloth.
- This is an electronic product. After the product's lifespan ends, do not discard it with regular household waste. Please consult your local authorities for proper disposal methods.




- Children should only use this product under adult supervision.







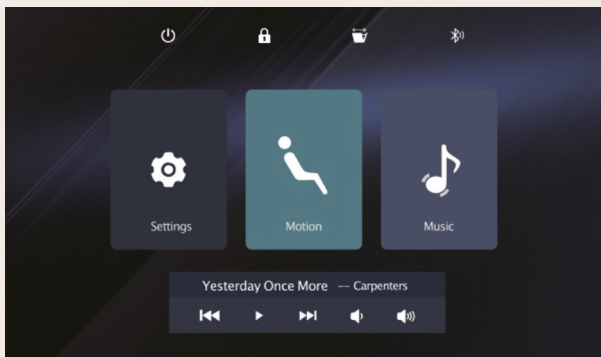

Operating steps

- 1 Connect the product and power it on.
- 2 When powered on, there is a voice prompt: "Power on", and the device enters the main interface.
- 3 Short press  to enter the display settings menu.
- 4 Short press  to enter the posture adjustment menu.
- 5 Short press  to enter the music control menu.


Assembly diagram


1 Main interface control



 
 



Button Icon	Function Description
	Settings: Short press to enter the display settings menu.
	Motion: Short press to enter the posture adjustment menu.
	Music: Short press to enter the music control menu.
	Music Control Mini menu: Allows control of music playback (next/previous track), pause/play, volume increase/decrease, and displays the singer and song name.
	Short press: the screen turns off, touch anywhere on the screen again, the screen turns on. Press and hold for 10 seconds to restart the display.
	Bluetooth indicator light: white when searching for Bluetooth, blue when connected to Bluetooth, long press this button to disconnect Bluetooth.
	Motorised Cupholder button: short press to open motorised cupholder, short press again to stop, short press again to close, short press again to stop.
	Press and hold this button for 5 seconds to enter the lock mode. The button will turn red and pressing any other button will have no response. Press and hold this button for 5 seconds again to unlock.


2 Display screen settings interface

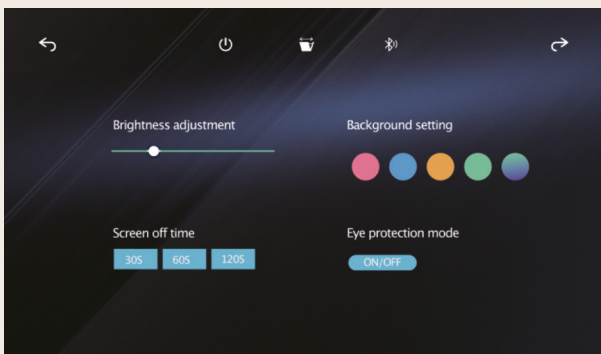
Short press  to enter the display settings interface.



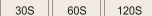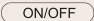




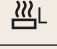 
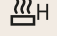 


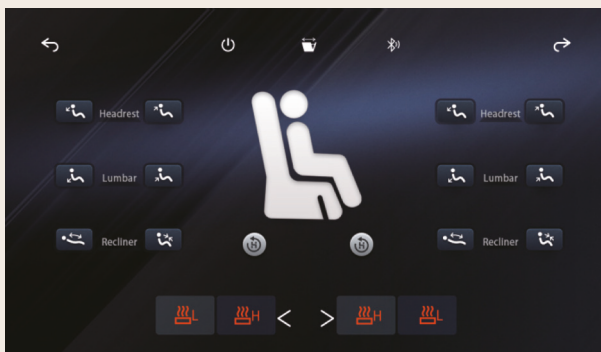Button Icon	Function Description
	Screen brightness adjustment: Drag the progress bar to adjust the screen backlight brightness.
	Screen background color adjustment: Choose from 5 color options to set the screen background color.
	Sleep time setting: You can choose the screen-on time after no operation, and can set the screen-on time after no operation to 30s, 60s and 120s.
	Eye protection mode: ON/OFF displays white when the eye protection mode is off, and ON/OFF displays blue when the eye protection mode is on.
	Back button: Short press any button to return to the previous operation interface.


3 Seat control interface


Short press  to enter the posture adjustment interface.









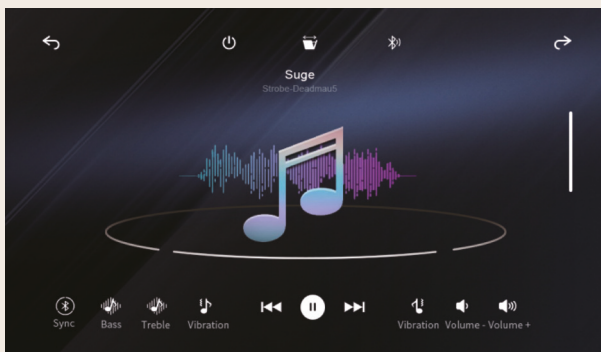


Button Icon	Function Description
	Seat reclining: Press to recline, release to stop.
	Seat closing: Press to retract, release to stop.
	Headrest opening: Press to open the headrest, release to stop.
	Headrest retraction: Press to retract the headrest, release to stop.
	Lumbar opening: Press to open the backrest, release to stop.
	Lumbar retraction: Press to retract the backrest, release to stop.
	Reset function: press to retract the seat first, then after a 1 second delay, simultaneously retract the headrest and lumbar support; release to stop. Note: 1. The Home buttons on both sides cannot be operated simultaneously to reset the sofa position. 2. The Home button only resets the sofa motor; other functions such as heating or motorized cup holder opening/closing of the console must be turned off manually.
	Heating pad: low heat setting.
	Heating pad: high heat setting.



4 Audio control interface

Short press  to enter the music control interface.





 




 

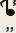 






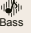


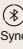 
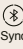 
Button Icon	Function Description
	Previous track: Short press to switch to the previous track, long press has no effect.
	Next track: Short press to switch to the next track, long press has no effect.
	Pause/play: short press to pause, short press again to play the track, long press has no effect.
 Volume+	Volume up: Each short press increases the volume by one level, long press increases continuously or you can drag the progress bar on the right upward to adjust, 0-16 levels adjustable.
 Volume-	Volume down: Each short press decreases the volume by one level, long press decreases continuously or you can drag the progress bar on the right to adjust downwards, 0-16 levels adjustable.
 Sync	Broadcast interconnection: short press to enter broadcast mode, this button will turn blue, short press again to exit broadcast mode, this button will turn white again.
 Treble	Treble button: Click on the right side of the treble button to pop up a progress bar with adjustable levels of 0-16.
 Bass	Bass button: Click on the right side of the bass button to pop up a progress bar with adjustable levels from 0 to 16.
 Vibration	Left/Right Vibration: Press once for level 1, press again for level 2, press again to turn off. (When levels 1 and 2 are active, the button will light up blue; when off, it will be white).

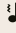4.1 Speaker function.

- 4.1.1 When powered on, the device starts automatically with a voice prompt: "Power on." The display screen vibrates to indicate startup, and enters Bluetooth pairing mode.
- 4.1.2 Tap  to enter the music operation interface.
- 4.1.3 Turn on the Bluetooth function on your phone or TV, search for the Bluetooth name "SofaScreen02A", and pair. After pairing is successful, the voice prompt "Bluetooth Connected" will be heard and  indicator light will be solid blue.

Note: Bluetooth version 5.3 and below can be connected. Functions may vary due to different device settings.

- 4.1.4 With the  blue indicator light on, short press the  button to display the treble adjustment progress bar on the right. Manually drag the bar to adjust the treble. When dragged to the lowest point, the  button turns white.
- 4.1.5 With the  blue indicator light on, short press the  button to display the bass adjustment progress bar on the right. Manually drag the bar to adjust the bass. When dragged to the lowest point, the  button turns white.
- 4.1.6 When the  indicator light is white, short press the  button once: voice prompt "Vibration Mode One" the left section enters low vibration mode and the indicator turns blue. Press  again: voice prompt "Vibration Mode Two," the left section enters high vibration mode, indicator stays blue. Press  a third time: voice prompt "Vibration off" the left section vibration turns off and the indicator turns white.
- 4.1.7 When the  indicator light is white, short press the  button once: voice prompt "Vibration Mode One," the right section enters low vibration mode and the indicator turns blue. Press  again: voice prompt "Vibration Mode Two," the right section enters high vibration mode, indicator stays blue. Press  a third time: voice prompt "Vibration off" the right section vibration turns off and the indicator turns white.
- 4.1.8 Short press , the volume decreases step by step, and the volume adjustment progress bar on the right side of the screen changes accordingly.

- 4.1.9 Short press , the volume increases step by step, and the volume adjustment progress bar on the right side of the screen changes accordingly. When the volume increases to the maximum, the voice prompt is: beep.
- 4.1.10 Short press  to go to the previous track.
- 4.1.11 Short press  to go to the next track.
- 4.1.12 Short press  to pause the music, short press again to play the music.
- 4.1.13.1 Short press , the button turns blue, and the voice prompt: Sync Mode entering the broadcast transmission state. The transmitter (primary device) is now transmission mode.
- 4.1.13.2 Connect the SofaScreen02B product as per the assembly diagram and power it on.
- 4.1.13.3 Pair the transmitter (SofaScreen02A) with the receiver (SofaScreen02B). Once paired successfully, The transmitter (SofaScreen02A) and receiver (SofaScreen02B) play music simultaneously.
- 4.1.13.4 Short press  again, the button turns white and the voice prompt is: Sync off. Turn off the broadcast.







Note:

When SofaScreen02A is connected via broadcast mode with another SofaScreen02A:

1. After enabling the broadcast function, the receiver (secondary unit) cannot control playback/pause, previous track, next track, or volume — these functions are disabled on the receiver and do not affect the transmitter (primary unit). However, controls such as treble adjustment, bass adjustment, and vibration adjustment only affect the receiver itself.
2. The transmitter (primary unit) can control playback/pause, previous track, next track, and volume on the receiver (secondary unit) simultaneously. However, it cannot control the receiver's treble adjustment, bass adjustment, or vibration adjustment.

3. When multiple speaker units (e.g., O2A and O2B) are powered on simultaneously, please ensure that only one unit is connected via Bluetooth before initiating the broadcast function. If multiple speaker units are connected via Bluetooth at the same time, the devices will fail to interconnect properly.
4. After pressing the play or pause button on the music playback interface, please wait at least 1 second before switching songs.

4.2 Console Cupholder opening function.

- 4.2.1 Tap: The console cupholder opens. Voice prompt: "Open". Tap  again: The  cupholder pauses. Tap  a third time: The cupholder retracts. Voice prompt: "Close".
- 4.2.2 Tap: The cupholder opens. Voice prompt: "Open". Tap  again: The cupholder  pauses. Tap  a third time: The cupholder retracts. Voice prompt: "Close".

Troubleshooting

Product malfunction

Fault	Possible causes and solutions
Unable to power on	<ol style="list-style-type: none">1. No power connection.2. The wire is disconnected or the plug is not fully inserted.3. The connected socket is faulty.
Bluetooth cannot connect	<ol style="list-style-type: none">1. If you are already connected to another Bluetooth device, press and hold the Bluetooth button to disconnect the current Bluetooth connection and try again.2. Do not connect Bluetooth beyond the limited distance of 8m. Avoid connecting through obstacles or in corners.
No Sound	<ol style="list-style-type: none">1. The playback enters pause mode. Press ► to resume playback.2. The extension cable of the speaker is disconnected. Please check all the connections or reconnect them.
Touch panel does not respond	<ol style="list-style-type: none">1. Equipment interference. Move the interference source away. Power off and restart after 15 seconds.2. The device crashes due to unreasonable operation. Restart after 15 seconds of power outage.3. The connector is loose. Please check all connectors and reconnect them.4. If the device fails, please contact the dealer for replacement.
Seat adjustment does not work	The connector is loose. Please check all connectors and reconnect them.
Bluetooth broadcast cannot connect	<ol style="list-style-type: none">1. Button touch not responsive. The broadcast function may not be turned on. Tap the broadcast button. There will be a prompt sound when the broadcast function is turned on.2. Both main and sub-units are connected to Bluetooth. Turn off the sub-unit's broadcast function and disconnect the Bluetooth connection, then turn on the broadcast function again.3. Product freeze. Restart after power-off.4. Function malfunction. Turn off both main and sub-units and then turn on again to reset the machine.

Fault	Possible causes and solutions
Bluetooth broadcast function is abnormal	1. The signal connection may be unstable due to the low version of Bluetooth or the TV. Turn off the broadcasting function for 10 seconds and then turn it back on. This may need to be repeated multiple times.
If device freezes, lags, or functions disappear	1. Reset the touchscreen 2. If the issue persists after restarting, please power off the device completely and then turn it back on.
Recommendations for Prolonged Use	Give your speakers a 30-minute break every 4 hours for best sound and durability.



LCD PROTECTION NOTICE

- 1 **Do not** exert excessive pressure, scratch or allow any impact.
- 2 Clean with a soft dry cloth only, no chemicals.
- 3 Avoid high temperature, humidity and bright sunlight.
- 4 Be sure to connect all cables before turning on the power.

Product Parameters

Electrical Specifications of Product Design

Input Power	DC29V/3A and DC20V/4.5A
Mid-High Frequency Speaker Output Power	8W*4 (Power at 5% distortion, Output Impedance: 8Ω)
Subwoofer Output Power	30W (Power at 5% distortion, Output Impedance: 4Ω)
Audio Input Sensitivity	400mV ± 50mV (Power at 5% distortion)
Distortion	0.1% (Distortion at 1W)
Left-Right Channel Separation	45dB
Frequency Response Range	40Hz-20kHz
Signal-to-Noise Ratio	≥80dB
Vibration Head Output Power	10W*2
Heating Pad Output Power	18.5W*4
Display Screen Power	6W
Motor Power	29V (The heating pad function will be turned off when the motor is in use)

Further product documentation
can be found at

la-z-boy.co.uk/productguides

or scan the QR code.



La-Z-boy

www.la-z-boy.co.uk