

Troubleshooting

Malfunction	Possible Causes and Solutions
Unable to power on	<ol style="list-style-type: none"> 1. No power connection. 2. Wire is disconnected or the plug is not fully inserted. 3. Faulty socket connection.
No sound	<ol style="list-style-type: none"> 1. The device is in pause mode - press the (2) button to resume playback. 2. The speaker's extension cord is disconnected. Please check all connections or reconnect.
Touchscreen unresponsive	<ol style="list-style-type: none"> 1. Device interference - move away from the interference source. Power off for 15 seconds and restart. 2. Improper operation causes the device to freeze. Power off for 15 seconds and restart. 3. Loose connection. Please check all connections and reconnect if necessary. 4. Device malfunction - please contact dealer for replacement.
Unable to connect Bluetooth	<ol style="list-style-type: none"> 1. Already connected to another Bluetooth device. Long press to disconnect the current Bluetooth connection and try again. 2. Out of effective range. Please do not connect beyond 8 meters of this product or attempt to connect through obstacles.
Wireless charging not working	<ol style="list-style-type: none"> 1. Please ensure that the phone has wireless charging function. 2. Please make sure there are no metallic objects on the back cover of the phone. 3. Please move the phone into alignment with the wireless charging position. 4. The wireless charger has an automatic shut-of when the internal temperature exceeds 65°C. Charging resumes when the temperature drops.
Cup holder rising - unable to flush to surface	<ol style="list-style-type: none"> 1. The cupholder is carrying weight. Please tap (5/9) button a few times to level it with the surface.

Further product documentation can be found at la-z-boy.co.uk/productguides or scan the QR code.



La-Z-boy

www.la-z-boy.co.uk

La-Z-Boy iTable 3 User Manual

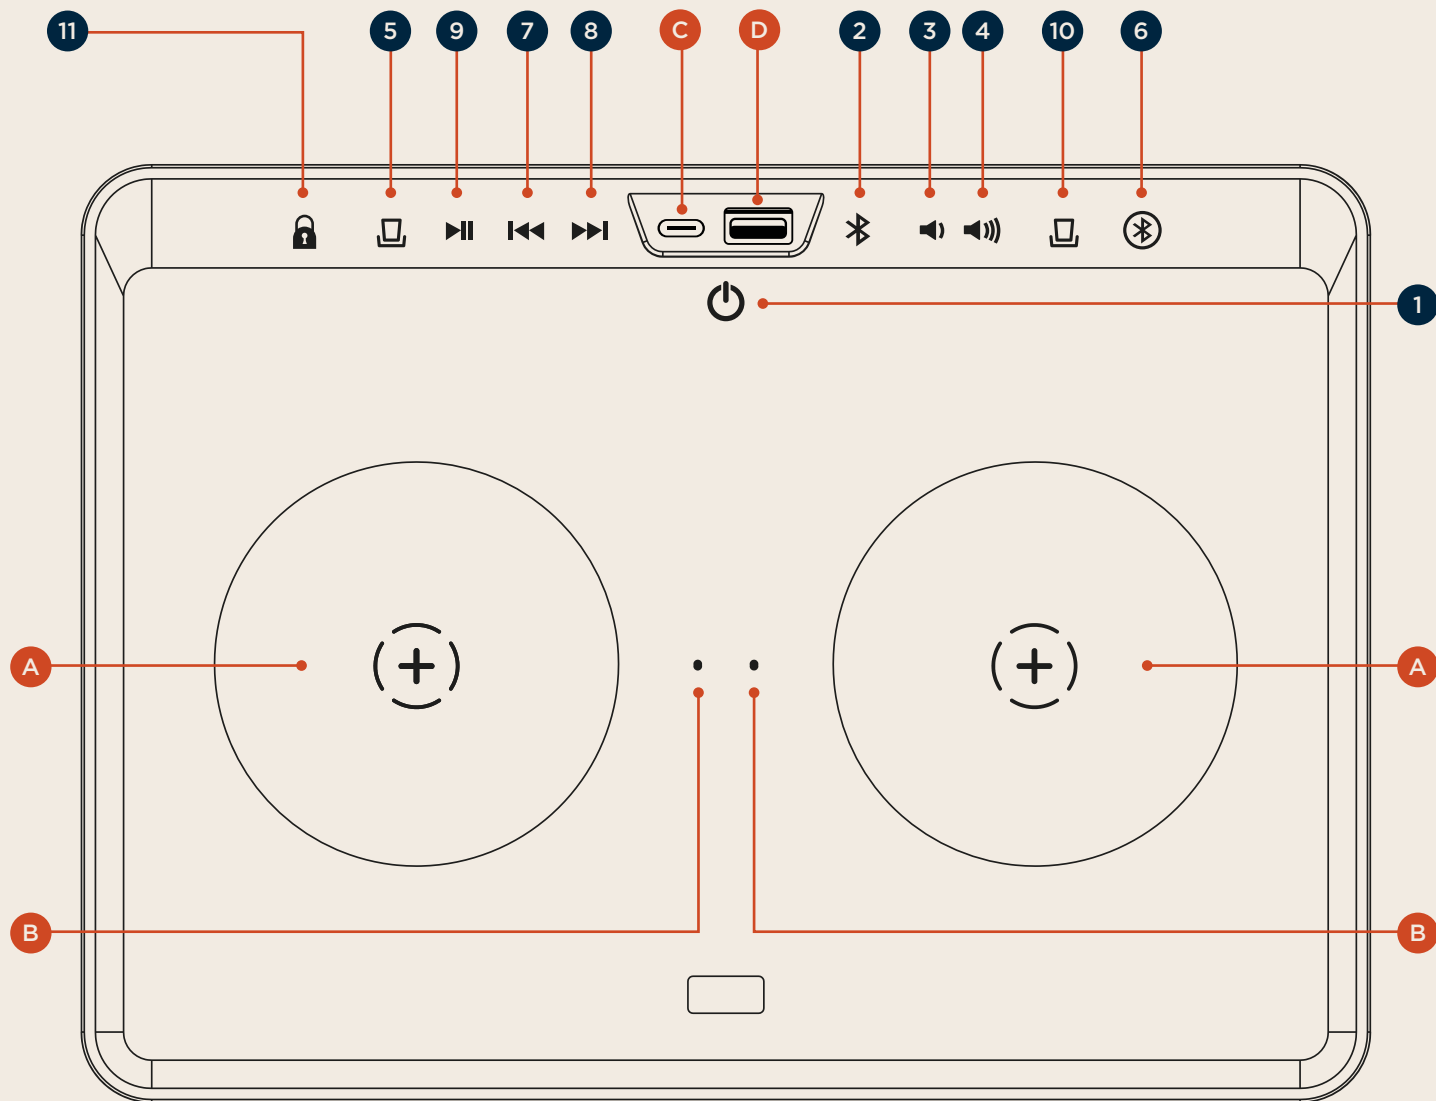
For more information visit
www.la-z-boy.co.uk







La-Z-boy

Version XXXX

Console components
















 




 
 


Console areas

Key	Function
	Wireless charging pads
	Wireless charging indicator light
	Waterproof USB-A charging port
	Waterproof USB-C charging port

Product Parameters	
Main Table Dimensions	275 x 200 x 70.6mm
Input	DC 29V2A
Audio power	8W x 2
Bluetooth version	5.0
USB A+C output	Max 18W
Wireless charging output	5 V1 A

Function keys

Key	Button	Button name	Function
		Power Switch	Long press to power on/off ; short press changes the color of the light button.
		Bluetooth	Long press to disconnect Bluetooth
		Volume Down	Long press to continuously decrease volume; short press to decrease volume step-by-step.
		Volume Up	Long press to continuously increase volume; short press to increase volume step-by-step.
		Cup Holder Control	Short press to bring retractable cupholder up/down
		Broadcast control Sync Multiple Consoles	Long press to turn off the broadcast function; short press to turn on broadcast function
		Previous Track	Short press to switch to previous track
		Next Track	Short press to switch to next track
		Play/Pause	Short press to play/pause
		Cup Holder Control	Short press to bring retractable cupholder up/down
		Lock Button	Long press to lock the buttons, turn off button lights and disable touch

Operation instructions

CHARGING FUNCTION

- Align the wireless charging receiver of the phone with (+) and place it flat above (+).
- If the blue light next to the wireless charging is on, it indicates that the charging is successful. If there is no response from the device, please move the phone until the receiver is aligned with the (+).
- Waterproof USB-C (≡) : supports charging mobile electronic devices with standard USB-C interface data cables.

BLUETOOTH SPEAKER FUNCTION

- Long press the **(1)**, then the Bluetooth indicator should flash blue, and the voice prompt will say: "Power On". The product enters the state of being ready to pair with Bluetooth devices. Other buttons will light up in white. Short press the power-on **(1)**, and all button lights will change colors in a cycle of white, green, and red. Long press the power button again to shut down, and the voice prompt will say: "Power Off".
- Turn on Bluetooth on your phone and search for the Bluetooth name iTable3, then pair. After successful pairing, the Bluetooth indicator will stay lit blue, and the voice prompt will say "Bluetooth connected".
- Open the music on your phone and press play. At this time, you can control the speaker's volume up/down, previous/next track, play/pause, disconnect Bluetooth, activate broadcast function, and other audio controls on the iTable3 control panel.

BROADCAST FUNCTION/SYNC MULTIPLE CONSOLES

- Please connect your device to Bluetooth, then press **(6)** button shortly to activate the broadcast/sync function. The **(6)** button will blink with a blue light and a voice prompt will say "Enter Broadcast mode". After blinking for 30 seconds, the blue light will stay on, indicating that the host console is in pairing state to pair with another console.

- Long press **(1)** button on the receiver of the secondary console to turn it on and then shortly press **(6)** button on the receiver of the secondary console. A voice prompt will say "Broadcast connected" and the host console and secondary console will be paired. When the pairing is successful, the **(6)** button on the secondary console will stay on a blue light. At this time, the host console and the secondary console will play music synchronously.
- Long press **(6)** button to deactivate the broadcast/sync function. A voice prompt will say "Exit broadcast mode".
- **NOTE:** After activating the broadcast/sync function, the previous track **(7)** and next track **▶▶** buttons on the secondary console will not work because they are being controlled by the host console. The play/pause button **(9)** works as mute function for the secondary console when paired. Other buttons only control the secondary console itself and have no effect on the host console.
- **NOTE:** The host console can control the previous track, next track, play/pause of both the host console and the secondary simultaneously.

CUP HOLDER LIGHTING AND LOCKING FUNCTION

- Short press **(5/10)** to lower the cup holder and place a cup or other items on it. Press **(5/10)** again to lift the cup holder and start wireless charging.
- Long press **(11)**, the **(11)** will stay on with blue light, all other buttons will be off and cease function.