

Product Parameters	
Tabletop dimensions	276*276*79.6mm
Input	DC29V2A / DC20V4.5A
Speaker output	24W*2
Low-frequency vibration output	8W*2
Bluetooth version	5.0
USB A+C output	Max 18W
Wireless charging output	10W/speaker

Further product documentation
can be found at
la-z-boy.co.uk/productguides
or scan the QR code.



La-Z-boy

www.la-z-boy.co.uk

La-Z-Boy iTable 4 User Manual


For more information visit
www.la-z-boy.co.uk






La-Z-boy

Version 0126

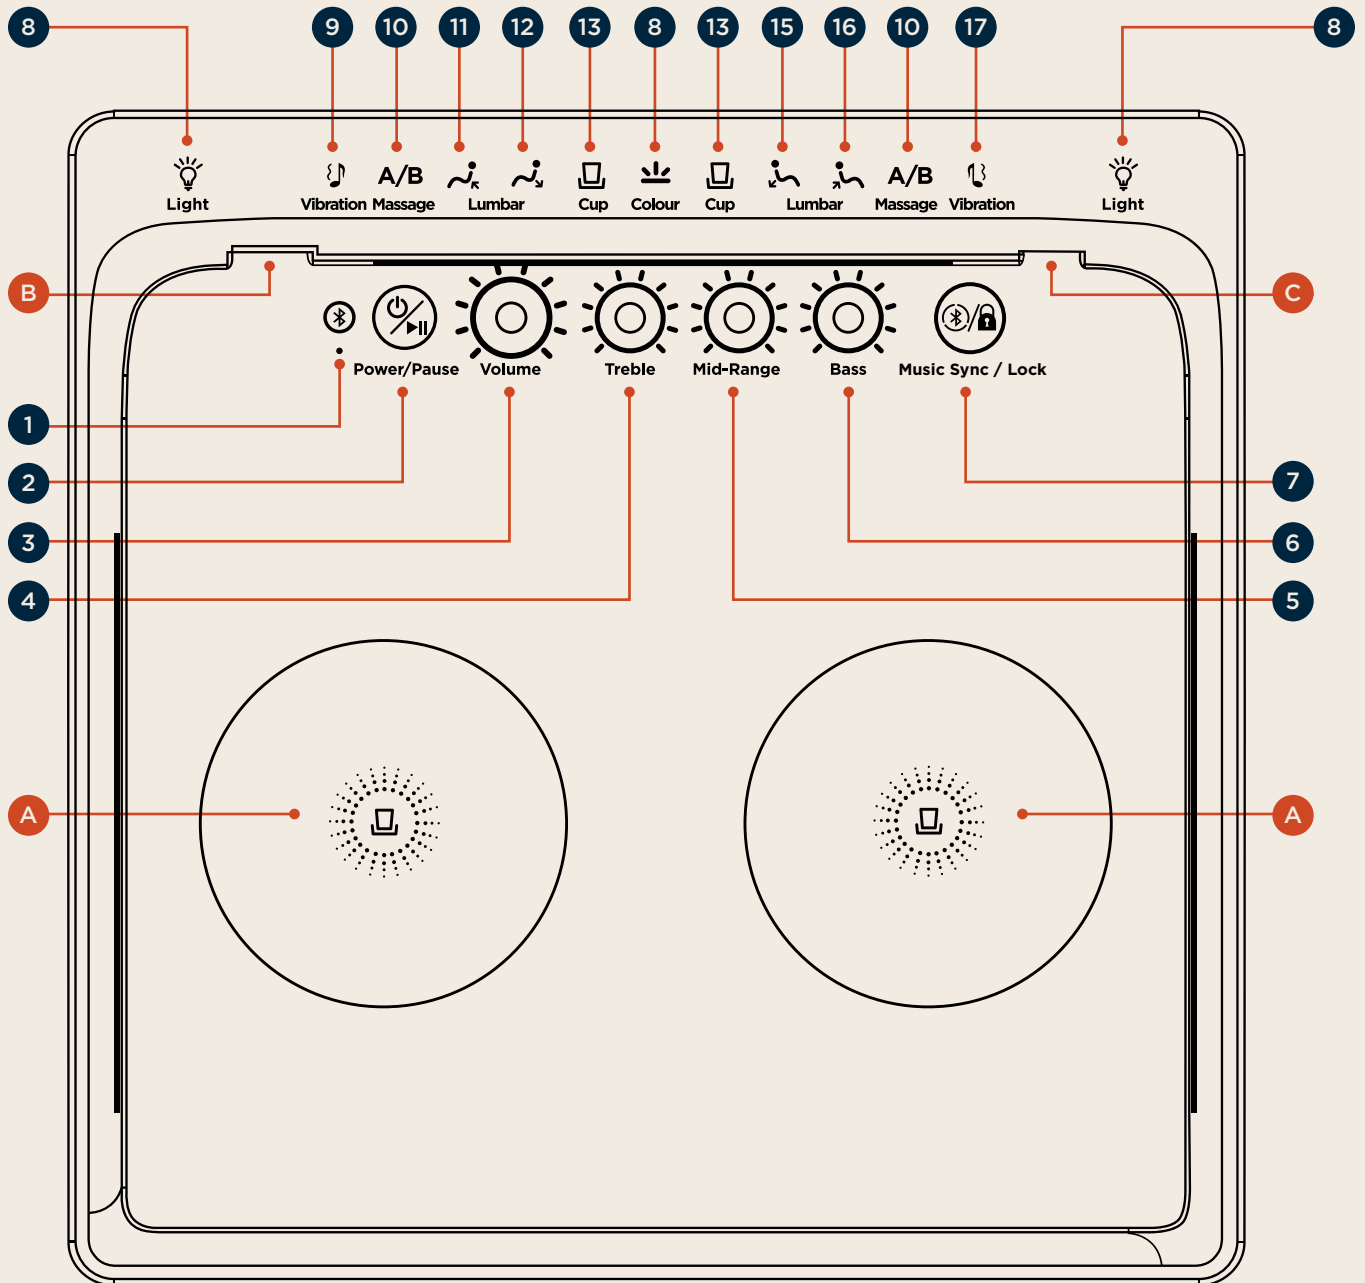













Console components












Console areas

Key	Function
	Wireless charging panels
	USB-A charging port
	USB-C charging port

Function keys

Key	Button	Button name	Function
		Bluetooth button	Long press to disconnect Bluetooth.
		Power button/play/pause	Long press to turn on, long press again to turn off, short press to pause music, short press again to play music.
		Overall volume adjustment	Rotate to adjust the total volume. When the volume is at its maximum, there will be a “beep, beep” tone.
		Treble adjustment	Rotate to adjust the treble strength.
		Mid-range adjustment	Rotate to adjust the midrange strength.
		Bass adjustment	Rotate to adjust the bass intensity.
		Sync/Lock	Short press: enter/exit music sync Long press: lock and unlock

Key	Button	Button name	Function
8		Light strip switch light strip color switch	Short press: switch the light strip color: warm white, blue and off. When the light strip is on, the button indicator is blue, and when it is off, the indicator is white. The light strip is turned off at a 4H timer.
9		Left low frequency vibration switch 2 vibration levels	Short press to turn on the first level of vibration with music. The indicator light will light up blue; short press again to turn on the second level of vibration with music. The indicator light will light up blue. Turn off the vibration with music with a third short press. The indicator light will light up white; the switch vibration will be accompanied by an audible sound.
10	A/B	Massage switch	The first short press activates level A massage intensity and the indicator light turns blue. The second short press activates the B level of massage intensity and the indicator light turns blue; the third short press turns off the massage.
11		Lumbar activation Left hand side	Short press: The left lumbar support is activated. The indicator light turns blue. After 30 minutes, it pauses and the indicator light changes to white.
12		Lumbar pause Left hand side	Short press: The lumbar support on the left side has been paused.
13		Lower and raise cup holder	Short press the cup holder to lower it, short press it again to raise it.
14		Desktop ambient lighting control	Long press to turn on/off the light, short press to switch the panel light color: warm white and blue
15		Lumbar activation Right hand side	Short press: The right lumbar support is activated. The indicator light turns blue. After 30 minutes, it pauses and the indicator light changes to white.
16		Lumbar pause Right hand side	Short press: The lumbar support on the right side has been paused.
17		Right low frequency vibration switch 2 vibration levels	Short press to turn on the first level of vibration with music. The indicator light will light up blue; short press again to turn on the second level of vibration with music. The indicator light will light up blue. Turn off the vibration with music with a third short press. The indicator light will light up white; the switch vibration will be accompanied by an audible sound.

Operation instructions



STEP 1

Connect the product according to the assembly diagram and power it on.

CHARGING FUNCTION

- Align your phone with the panel and place it flat on top. If charging is successful, the wireless charging indicator will light up blue. If the device does not respond, move the phone until the receiver is aligned.



- USB-A charging port: Supports charging mobile electronic devices with a standard USB-A cable.



- USB-C charging port: Supports charging mobile electronic devices with a standard USB-C cable.



BLUETOOTH SPEAKER FUNCTION

- Press and hold the power button **(2)** to power on. A voice prompt “Power on” will sound. The Bluetooth indicator will slowly flash blue. A voice prompt will say “Wait for pairing.” The product will enter the pairing state and flash blue within 30 seconds. If pairing is unsuccessful, the Bluetooth indicator will stop flashing and remain in the pairing state. Press and hold the power button again to power off. A voice prompt will say “Power off.”
- Turn on Bluetooth on your phone and search for the Bluetooth name: Smart sofa 06A. Pair the device. After successful pairing, a voice prompt will say: “Bluetooth Connected.” The Bluetooth indicator will light up solid blue.
- Open the music app on your phone and play music. You can control the music on your phone: previous song, next song, pause, volume down, volume up, etc.

- Long press **(1)** to disconnect the Bluetooth connection. The Bluetooth indicator will flash slowly and a voice prompt will say: “Bluetooth disconnected.” You will need to re-pair the device with your phone to resume music playback. Note: This product has a Bluetooth reconnection function.

LINKING A SECOND CONSOLE

- Short press **(7)** to connect to a second console. Short press again to disconnect. Long press the button to enter child lock mode, disabling the button. Long press again to unlock the button and allow it to operate.

LOW-FREQUENCY VIBRATION FUNCTION

- Short press **(9)** to activate the first level of vibration for the left sofa seat. Short press again to activate the second level of vibration for the left sofa seat. Short press a third time to disable the vibration for the left sofa seat.
- Short press **(14)** to activate the first level of music vibration for the right sofa seat; short press again to activate the second level of music vibration for the right sofa seat; short press a third time to disable the music vibration for the right sofa seat.

MESSAGE MODE

- Short press **(10)** once to enter airbag massage level A; short press twice to enter airbag massage level B; short press a third time to disable the airbag massage.

CUP HOLDER FUNCTION

- Short press **(13)** to lower the cup holder to place a cup, etc. Short press again to raise it for wireless charging.

LIGHTING CONTROL

- Short press **(14)** to cycle the light strip between warm white, blue, and off. The button indicator is blue when the light strip is on and white when it is off. The light strip has a 4-hour timer to turn off.
- Short press **(14)** to cycle the panel ambient lighting between warm white and blue. Long press to turn the panel ambient lighting on and off.

LUMBAR AIRBAG CONTROL

- Short press **(11)** to inflate the left airbag. The blue light illuminates during inflation.
- Short press **(12)** to deflate the left airbag.
- Short press **(15)** to inflate the left airbag. The blue light illuminates during inflation.
- Short press **(16)** to deflate the left airbag.

MUSIC SYNC FUNCTION

- Tap button **(7)** on the primary unit: voice prompt “Enter Broadcast Mode”. The primary unit enters transmitting mode.
- Power on the secondary unit, then tap the secondary unit button **(7)**: voice prompt “Enter Broadcast Mode”. Pairing occurs between the primary unit and secondary unit. If connected within 30 seconds, pairing is successful, and the primary unit and secondary unit will play music synchronously.
- Tap button **(7)** to exit music sync mode: voice prompt “Exit Broadcast Mode”.

NOTES:

- After the primary unit and secondary unit have synchronized music playback, the volume, treble, midrange, bass adjustments and play/pause on the secondary unit are disabled. Other buttons only control the secondary unit itself and do not affect the primary unit.
- The primary unit can simultaneously control both primary and secondary units for volume, treble, midrange, bass adjustments, and play/pause.

COMMON TROUBLESHOOTING

Problem	Possible Cause and Solution
Cannot Power On	<ol style="list-style-type: none"> 1. No power connection. 2. Power cord disconnected or plug not fully inserted. 3. Faulty socket.
No Sound	<ol style="list-style-type: none"> 1. Playback is paused. Short press to resume playback. 2. The speaker extension cord is disconnected. Please check all connections or reconnect them.
No Touch Response	<ol style="list-style-type: none"> 1. Device interference. Remove the interference source. Power off for 15 seconds and restart. 2. Device freeze caused by improper operation. Power off for 15 seconds and restart. 3. Loose connectors. Check all connectors and reconnect. 4. Device malfunction. Contact your dealer for a replacement.
Unable to Connect Bluetooth	<ol style="list-style-type: none"> 1. Already connected to another Bluetooth connection. Long press to disconnect the current Bluetooth connection and try again. 2. Out of range. Do not connect beyond 8M. Do not attempt to connect through obstacles. 3. The product is in broadcast mode. Short press to exit broadcast mode.
Music is being played by another device	<ol style="list-style-type: none"> 1. Since Bluetooth has a reconnect function, please check if your phone is paired with two Bluetooth devices simultaneously, unpair one of them, and then tap the play button on your phone.
Wireless charging is not working	<ol style="list-style-type: none"> 1. Make sure your phone has wireless charging capabilities. 2. Ensure there are no metal objects on the back of your phone. 3. Move your phone toward the wireless charging position. 4. Wireless charging has an over-temperature protection function. If the internal temperature exceeds 65 °C, it will pause and resume charging after the temperature drops.
The cup holder is not rising flush with the surface	<ol style="list-style-type: none"> 1. If the cup holder sinks after being loaded, remove the load and tap it several times to make it flush with the surface.
Radio connection failure	<ol style="list-style-type: none"> 1. Check if the secondary device is connected to another Bluetooth device. Long-press to disconnect the current Bluetooth connection and try again. 2. Check the connections to see if all connections are complete. 3. Since Bluetooth has a back-connection function, please check whether your phone is paired with two Bluetooth devices at the same time, unpair one of them, and click the play button on your phone.