

Product Parameters iTable409BCT03(G)	
Tabletop dimensions	276*276*79.6mm
Input	DC29V2A / DC20V4.5A
Speaker output	12W*2
Subwoofer output	36W
Bluetooth version	5.0
USB A+C output	Max 18W
Wireless charging output	10W*2

Further product documentation  
can be found at  
[la-z-boy.co.uk/productguides](http://la-z-boy.co.uk/productguides)  
or scan the QR code.



*La-Z-boy*

[www.la-z-boy.co.uk](http://www.la-z-boy.co.uk)

# La-Z-Boy iTable4BCT03 User Manual

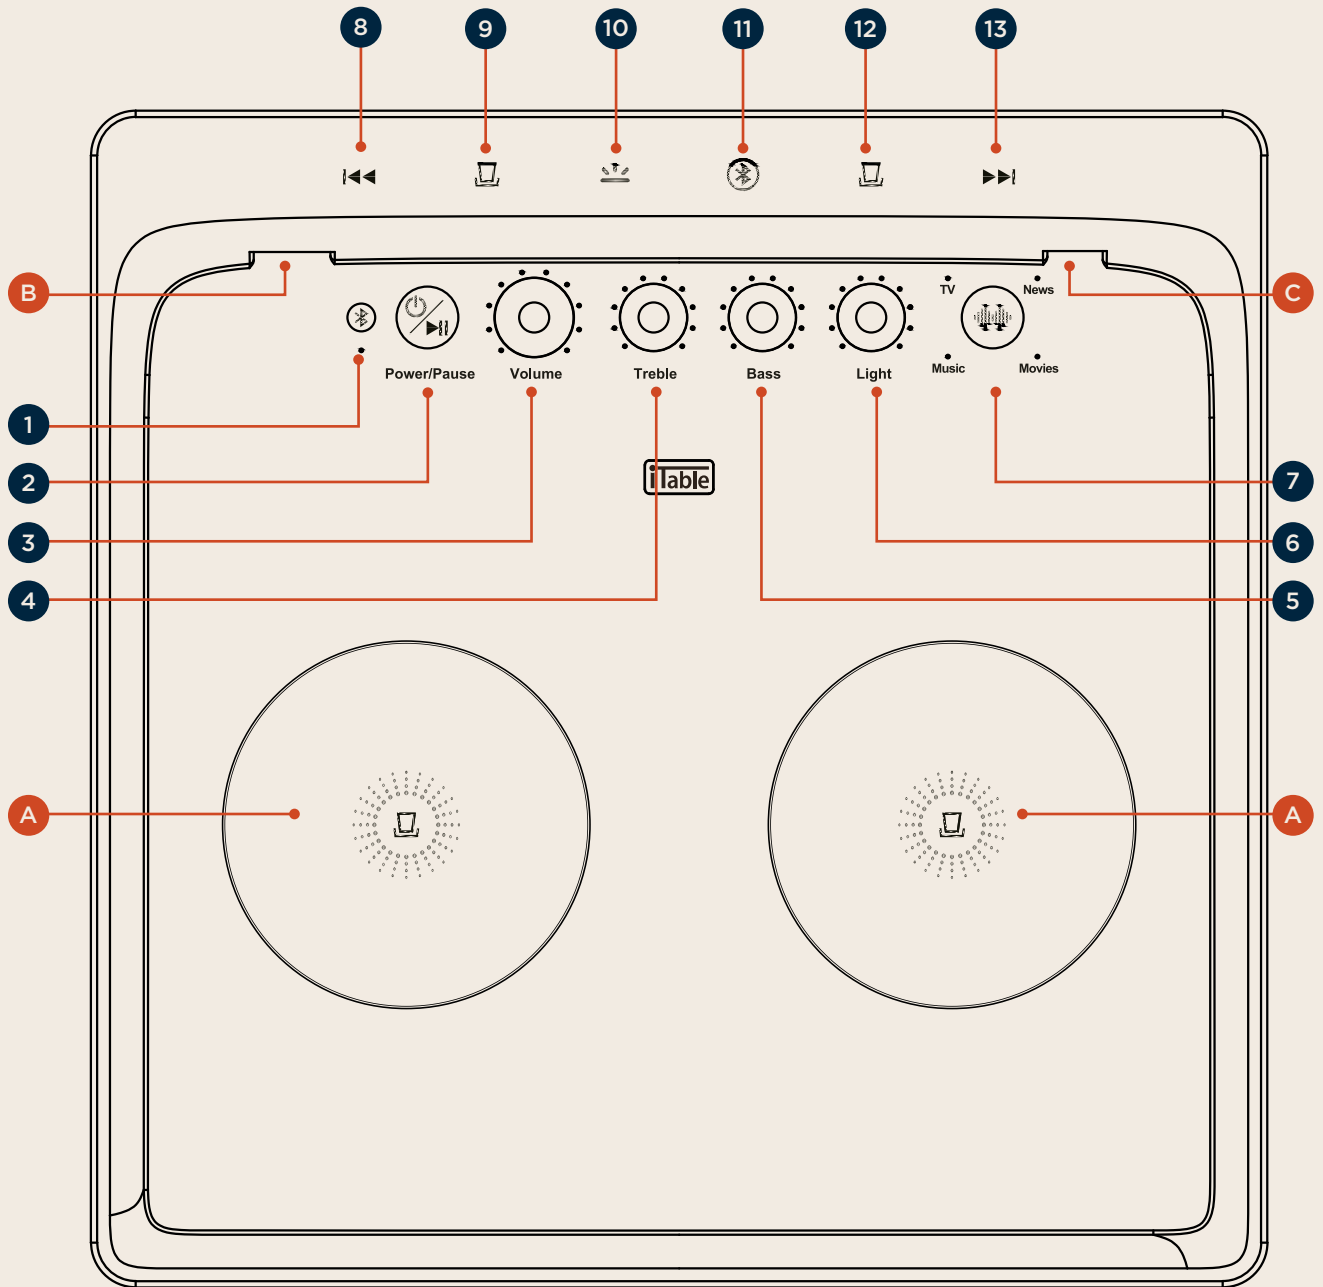
For more information visit  
[www.la-z-boy.co.uk](http://www.la-z-boy.co.uk)



*La-Z-boy*




Version 0126

# Console components















# Console areas








---

Key	Function
	Wireless charging panels
	USB-A charging port
	USB-C charging port

# Function keys

---

Key	Button	Button name	Function
		Bluetooth button	Long press to disconnect Bluetooth.
		Power button/play/pause	Long press to turn on, long press again to turn off, short press to pause music, short press again to play music.
		Overall volume adjustment	Rotate to adjust the total volume. When the volume is at its maximum, there will be a “beep, beep” tone.
		Treble adjustment	Rotate to adjust the treble strength.
		Bass adjustment	Rotate to adjust the bass intensity.
		Light adjustment	Rotate to adjust the brightness on both sides of the tabletop

Key	Button	Button name	Function
7		Music mode	Short press to switch music modes
8		Previous track	Short press the button to play previous track.
9		Cup Holder adjustment	Short press to control cup holder height adjustment
10		Ambient light button	Long press to turn light on / off. Short press to change colours.
11		Broadcast button	Short press to boardcast connection. The white line will be on after succesful pairing.
12		Cup Holder adjustment	Short press to control cup holder height adjustment
13		Next track	Short press the button to play next track.

# Operation instructions

---



## STEP 1

Connect the product according to the assembly diagram and power it on.

### CHARGING FUNCTION

- Align your phone with the panel and place it flat on top. If charging is successful, the wireless charging indicator will light up blue. If the device does not respond, move the phone until the receiver is aligned.



- USB-A charging port: Supports charging mobile electronic devices with a standard USB-A cable.



- USB-C charging port: Supports charging mobile electronic devices with a standard USB-C cable.



### BLUETOOTH SPEAKER FUNCTION

- Press and hold the power button **(2)** to power on. A voice prompt “Power on” will sound. The Bluetooth indicator will slowly flash blue. A voice prompt will say “Wait for pairing.” The product will enter the pairing state and flash blue within 30 seconds. If pairing is unsuccessful, the Bluetooth indicator will stop flashing and remain in the pairing state. Press and hold the power button again to power off. A voice prompt will say “Power off.”
- Turn on Bluetooth on your phone and search for the Bluetooth name: iTable 409. Pair the device. After successful pairing, a voice prompt will say: “Bluetooth Connected.” The Bluetooth indicator will light up solid blue.
- Open the music app on your phone and play music. You can control the music on your phone: previous song, next song, pause, volume down, volume up, etc.

- Long press **(1)** to disconnect the Bluetooth connection. The Bluetooth indicator will flash slowly and a voice prompt will say: “Bluetooth disconnected.” You will need to re-pair the device with your phone to resume music playback. Note: This product has a Bluetooth reconnection function.

### TABLETOP BRIGHTNESS FUNCTION

- Rotate the light knob **(10)** to adjust the brightness on both sides of the tabletop.

### CUP HOLDER FUNCTION

- Short press **(9/12)** to lower the cup holder to place a cup, etc. Short press again to raise it for wireless charging.

### MUSIC SYNC FUNCTION

- Tap button **(11)** on the primary unit: voice prompt “Enter Broadcast Mode” and the blue light flashes. The primary unit enters transmitting mode.
- Power on the secondary unit, then short press the secondary unit button **(11)**: voice prompt “Enter Broadcast Mode”. Pairing occurs between the primary unit and secondary unit. If connected within 30 seconds, pairing is successful, and the primary unit and secondary unit will play music synchronously.
- Tap button **(11)** to exit music sync mode: voice prompt “Exit Broadcast Mode”.

### NOTES:

- After the primary unit and secondary unit have synchronized music playback, the volume, treble, midrange, bass adjustments and play/pause on the secondary unit are disabled. Other buttons only control the secondary unit itself and do not affect the primary unit.
- The primary unit can simultaneously control both primary and secondary units for volume, treble, midrange, bass adjustments, and play/pause.

## COMMON TROUBLESHOOTING

Problem	Possible Cause and Solution
<b>Cannot Power On</b>	<ol style="list-style-type: none"><li>1. No power connection.</li><li>2. Power cord disconnected or plug not fully inserted.</li><li>3. Faulty socket.</li></ol>
<b>No Sound</b>	<ol style="list-style-type: none"><li>1. Playback is paused. Short press to resume playback.</li><li>2. The speaker extension cord is disconnected. Please check all connections or reconnect them.</li></ol>
<b>No Touch Response</b>	<ol style="list-style-type: none"><li>1. Device interference. Remove the interference source. Power off for 15 seconds and restart.</li><li>2. Device freeze caused by improper operation. Power off for 15 seconds and restart.</li><li>3. Loose connectors. Check all connectors and reconnect.</li><li>4. Device malfunction. Contact your dealer for a replacement.</li></ol>
<b>Unable to Connect Bluetooth</b>	<ol style="list-style-type: none"><li>1. Already connected to another Bluetooth connection. Long press to disconnect the current Bluetooth connection and try again.</li><li>2. Out of range. Do not connect beyond 8M. Do not attempt to connect through obstacles.</li><li>3. The product is in broadcast mode. Short press to exit broadcast mode.</li></ol>
<b>Music is being played by another device</b>	<ol style="list-style-type: none"><li>1. Since Bluetooth has a reconnect function, please check if your phone is paired with two Bluetooth devices simultaneously, unpair one of them, and then tap the play button on your phone.</li></ol>
<b>Wireless charging is not working</b>	<ol style="list-style-type: none"><li>1. Make sure your phone has wireless charging capabilities.</li><li>2. Ensure there are no metal objects on the back of your phone.</li><li>3. Move your phone toward the wireless charging position.</li><li>4. Wireless charging has an over-temperature protection function. If the internal temperature exceeds 65 ° C, it will pause and resume charging after the temperature drops.</li></ol>
<b>The cup holder is not rising flush with the surface</b>	<ol style="list-style-type: none"><li>1. If the cup holder sinks after being loaded, remove the load and tap it several times to make it flush with the surface.</li></ol>
<b>Radio connection failure</b>	<ol style="list-style-type: none"><li>1. Check if the secondary device is connected to another Bluetooth device. Long-press to disconnect the current Bluetooth connection and try again.</li><li>2. Check the connections to see if all connections are complete.</li><li>3. Since Bluetooth has a back-connection function, please check whether your phone is paired with two Bluetooth devices at the same time, unpair one of them, and click the play button on your phone.</li></ol>